



**INSULATION OF NEW SEWERS**

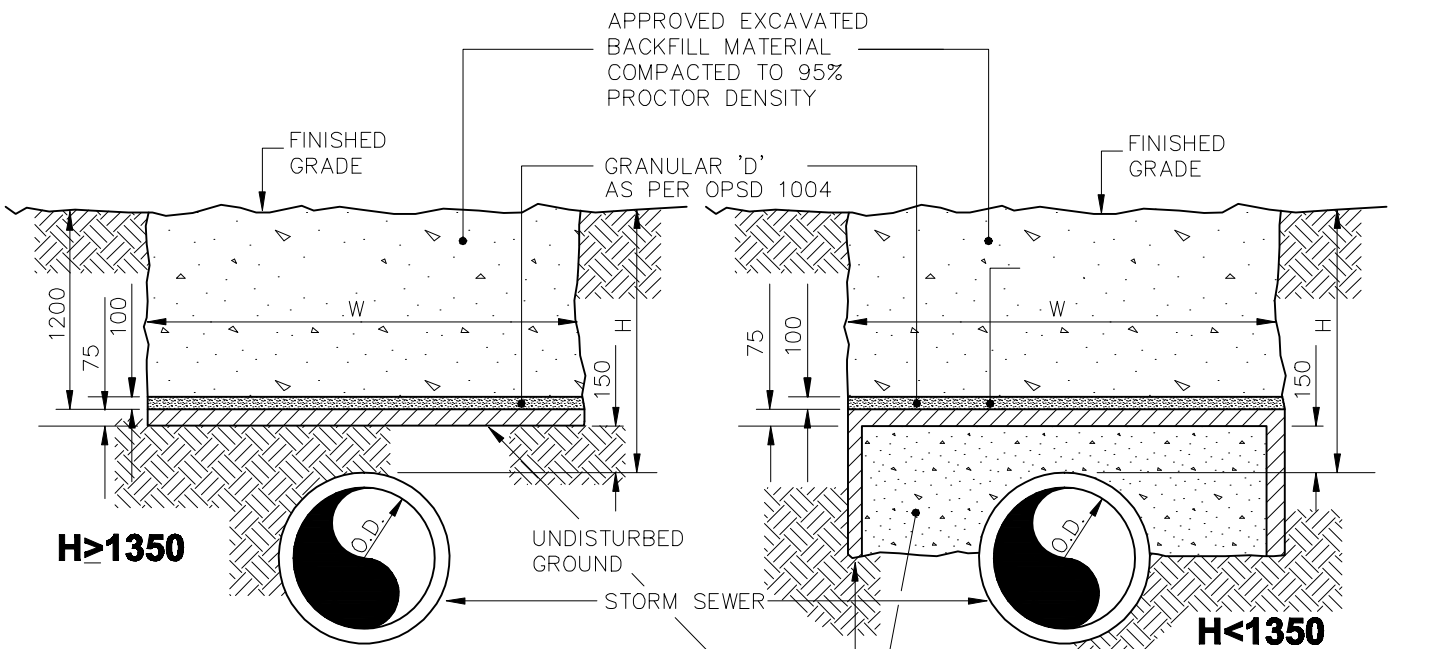

**INSULATION OF EXISTING SEWERS**

$W = O.D. + 2(1500-H)$  OR  $O.D. + 600$   
WHICHEVER IS GREATER

WHERE  
 W = INSULATION WIDTH  
 O.D. = OUTSIDE DIAMETER OF PIPE  
 H = DEPTH OF PIPE TO BE INSULATED

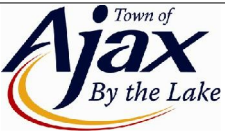

ENGINEERING SECTION

**STORM SEWER  
 INSULATION DETAIL**

DWG. No.  
**AS-137**

DATE  
 JANUARY 2011

REVISION No.