


NOTE:

1. ENSURE THAT ALL ORGANIC MATTER IS REMOVED FROM THE EXCAVATED WALKWAY PRIOR TO PLACING LIMESTONE FINES.
2. PROVIDE GEOTEXTILE MEMBRANE AS DIRECTED IN AREAS WHERE BASE MATERIALS MAY BE IN CONTACT WITH CLAY OR DEEP LOAM SOILS.

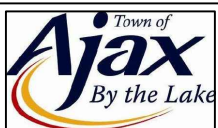

OPERATIONS SECTION

PAVING - PRECAST UNIT

DWG. No.

AS-802

DATE

SEPT. 2020

REVISION No.