


NOTE:

1. ENSURE THAT ALL ORGANIC MATTER IS REMOVED FROM THE EXCAVATED WALKWAY PRIOR TO PLACING GRANULARS.
2. OPTIONAL: TERRAFIX 270R GEOTEXTILE FILTER FABRIC, OR APPROVED EQUAL, IN WET AREAS.

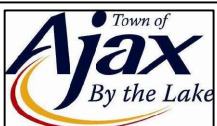

OPERATIONS SECTION

LIMESTONE SCREENING WALKWAY HEAVY DUTY

DWG. No.

AS-805

DATE

NOV. 2020

REVISION No.