


HAND-TAMPED  
EDGES-TYPICAL

150mm HARDWOOD CHIP SURFACE  
ROLLED FINISH

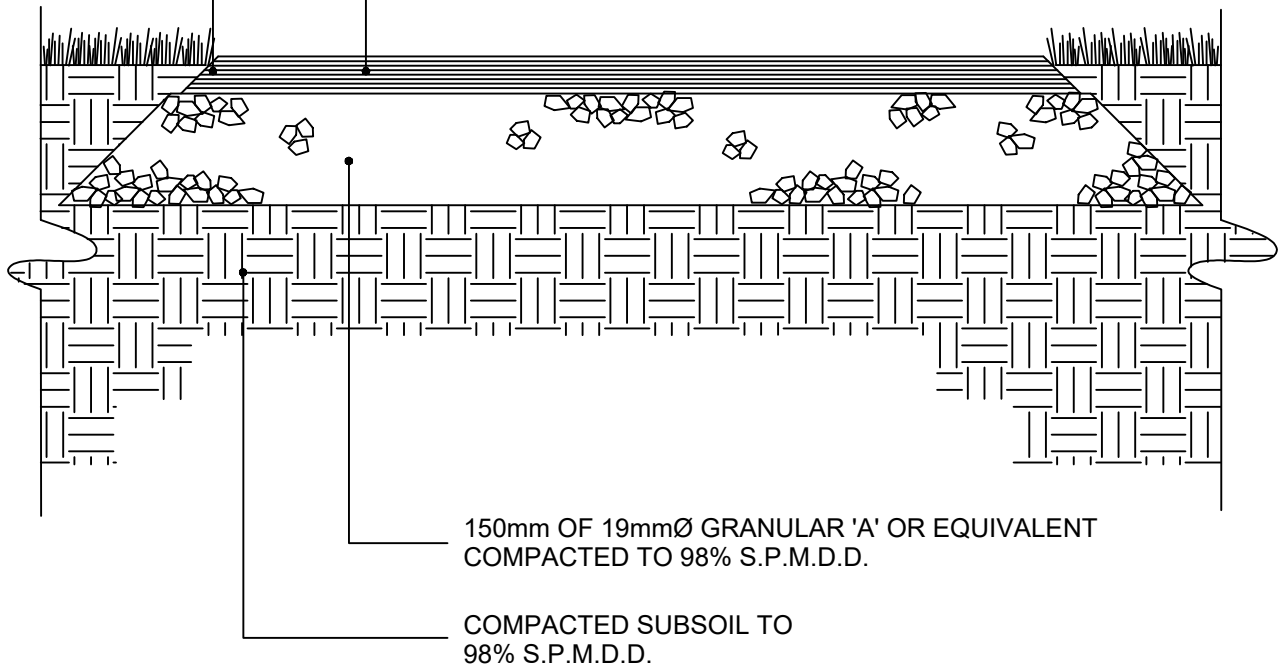

NOTE:

1. ENSURE THAT ALL ORGANIC MATTER IS REMOVED FROM THE EXCAVATED AREA PRIOR TO PLACING AND COMPACTION OF BASE MATERIALS.



OPERATIONS SECTION

## WOOD CHIP PATH

DWG. No.

**AS-806**

DATE

NOV. 2020

REVISION No.